

Display Setup

Available

Amps 2
Amps 3
Amps Sum
Volts 2
Volts 3
Volts Sum
Watts IN 2
Watts IN 3
Watts IN Sum
PF 2
PF 3
PF Sum
Watts OUT
Aux IN
Direction
kW OUT



Selected

Amps 1
Volts 1
Watts IN 1
PF 1
Efficiency
Speed [RPM]
Torque [oz.in]
Horsepower
Time

Select parameters on the left and move them to the right.

Either use the arrow keys, or double click an entry.

To reset, click the "<<" button.